

TRACK ADAPTER

3-PHASE




Wastberg AB
Box 5085
200 71 Malmö
Sweden
wastberg.com


Page 1/2

March 2026


1.

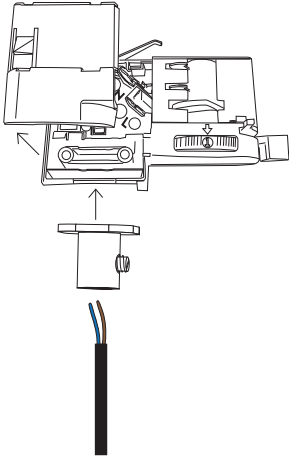


2.

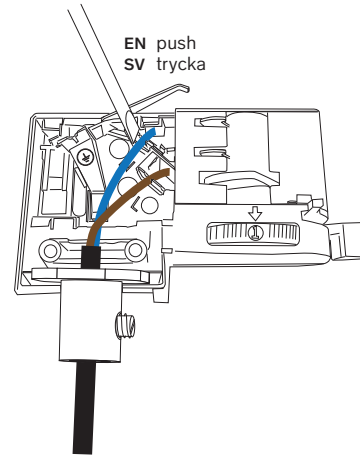

3.

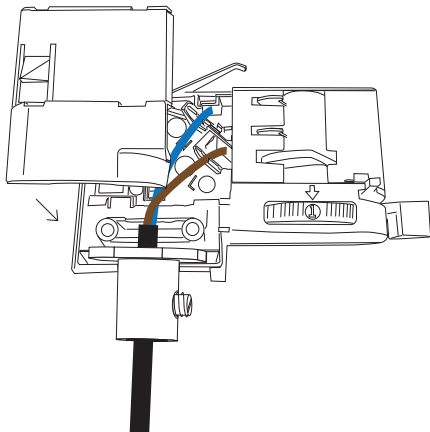

4.

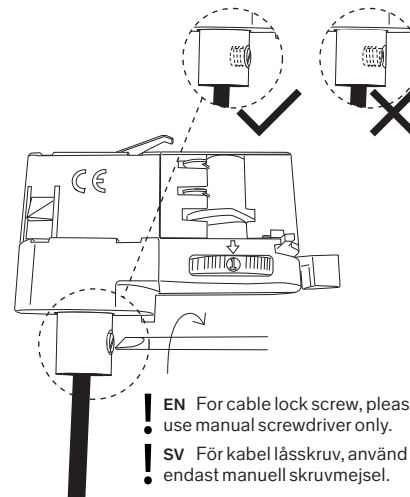

EN Mounting instructions

1. Open the adapter and place the strain relief.
Pull the cable through the strain relief.
2. Connect the wires to the adapter by pushing them in the clamps with a flat screw driver.
3. Close the adapter.
4. Tighten the strain relief by screwing in the screw.

sv Monteringsanvisningar

1. Öppna adaptern och placera dragavlastningen.
Dra kabeln genom dragavlastningen.
2. Anslut ledningarna till adaptern genom att trycka in dem i klämmorna med en platt skruvmejsel.
3. Stäng adaptern.
4. Dra åt dragavlastningen genom att skruva i skruven.

TRACK ADAPTER 3-PHASE




Wastberg AB
Box 5085
200 71 Malmö
Sweden
wastberg.com


Page 2/2

March 2026


5.

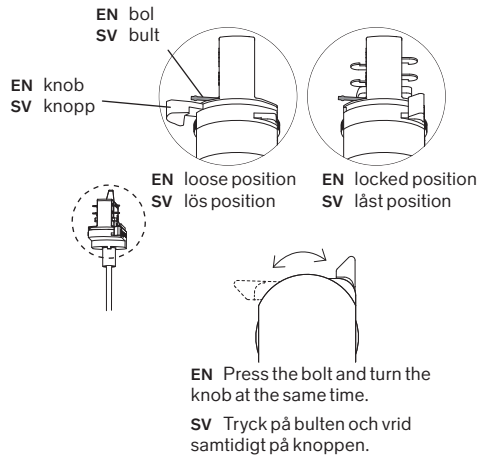


7.

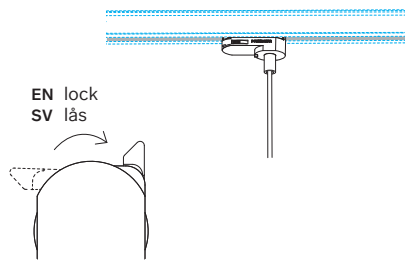

6.

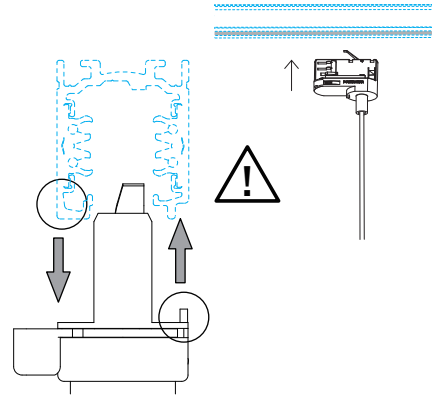

8.

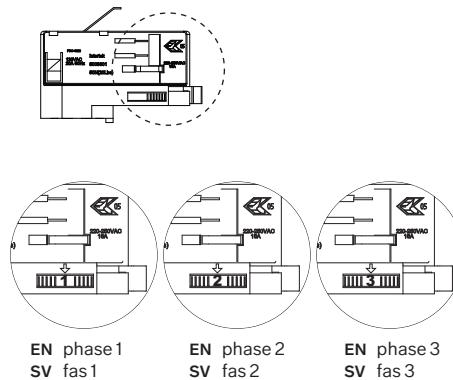

EN Mounting instructions

- Slide the knobs to loose position for mounting the adapter.
- Mount the adapter to the track.
- Close the knob to lock the position of the adapter on the track.
- Choose the correct phase by rotating the wheel.

sv Monteringsanvisningar

- Skjut reglagen till det öppna läget för att montera adaptern.
- Montera adaptern på skenan.
- Stäng knoppen för att låsa adapterns position på skenan.
- Välj rätt fas genom att vrida på hjulet.

EN Note: it's not allowed to slide the device in the track. If you want to change the location of the device, please pull the device out of the track and install it on the correct position.

SV Observera: det är inte tillåtet att skjuta enheten i spåret. Om du vill ändra enhetens placering, dra ut enheten ur spåret och installera den på rätt plats.

