

TRACK ADAPTER

1-PHASE




Wastberg AB
Box 5085
200 71 Malmö
Sweden
wastberg.com


Page 1/1

March 2026


1.

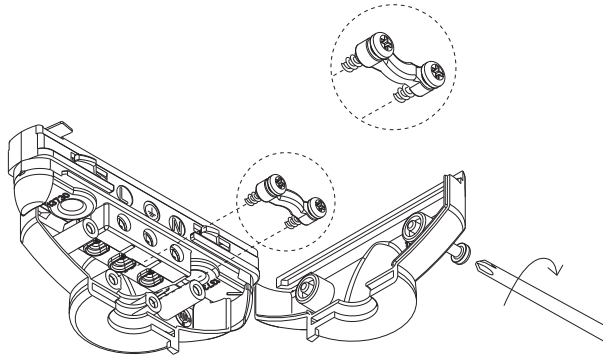

2.

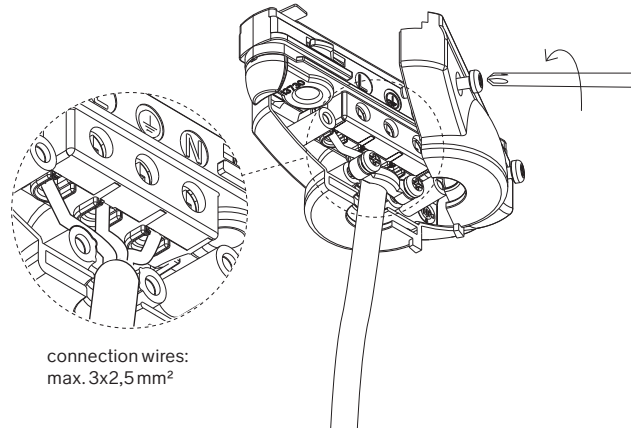

3.

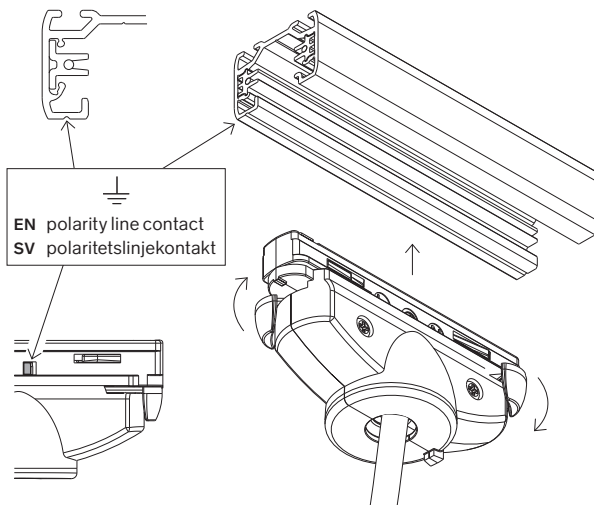

EN Mounting instructions

1. Open the adapter by loosening the screws and unscrew the strain relief

When a small cable is used, the strain relief must be reversed to secure the locking.

2. Connect the wires to the terminal and fix the strain relief on the cable. Close the adapter by screwing it together.

3. Put the adapter in the track and close it on the sides. Get sure to mount it in the correct polarity direction.

sv Monteringsanvisningar

1. Öppna adaptern genom att lossa skruvarna och skruva loss dragavlastningen.

När en liten kabel används måste dragavlastningen vändas för att säkra låsningen.

2. Anslut ledningarna till terminalen och fäst dragavlastningen på kabeln. Stäng adaptern genom att skruva ihop den.

3. Sätt adaptern i spåret och stäng den på sidorna. Se till att den monteras i rätt polaritetsriktning.

EN Note: it's not allowed to slide the device in the track. If you want to change the location of the device, please pull the device out of the track and install it on the correct position.

SV Observera: det är inte tillåtet att skjuta enheten i spåret. Om du vill ändra enhetens placering, dra ut enheten ur spåret och installera den på rätt plats.

